

Quick Start Guide

NT10XXX and NT11XXX
Serial LCD Tablet






Quick Start Guide

NT10XXX and NT11XXX Serial LCD Tablet


Scan the QR code for the latest versions and available languages:
support.namirial.com/en/download/tsp/#namirial-pad



1. Plug in Device

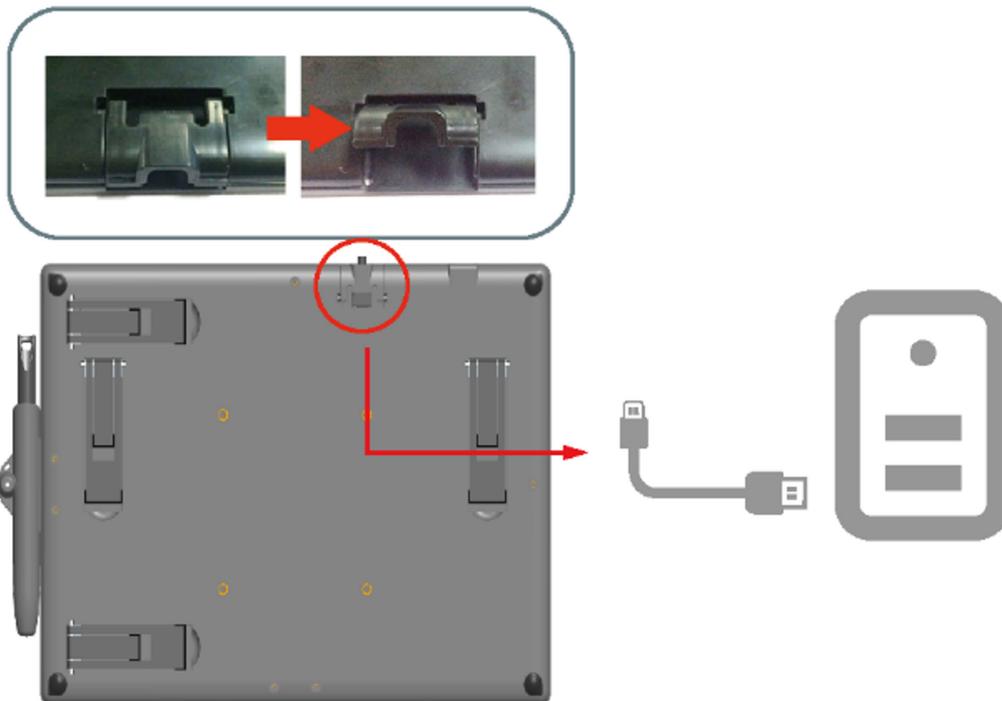

Correct connecting of NT10XXX/NT11XXX

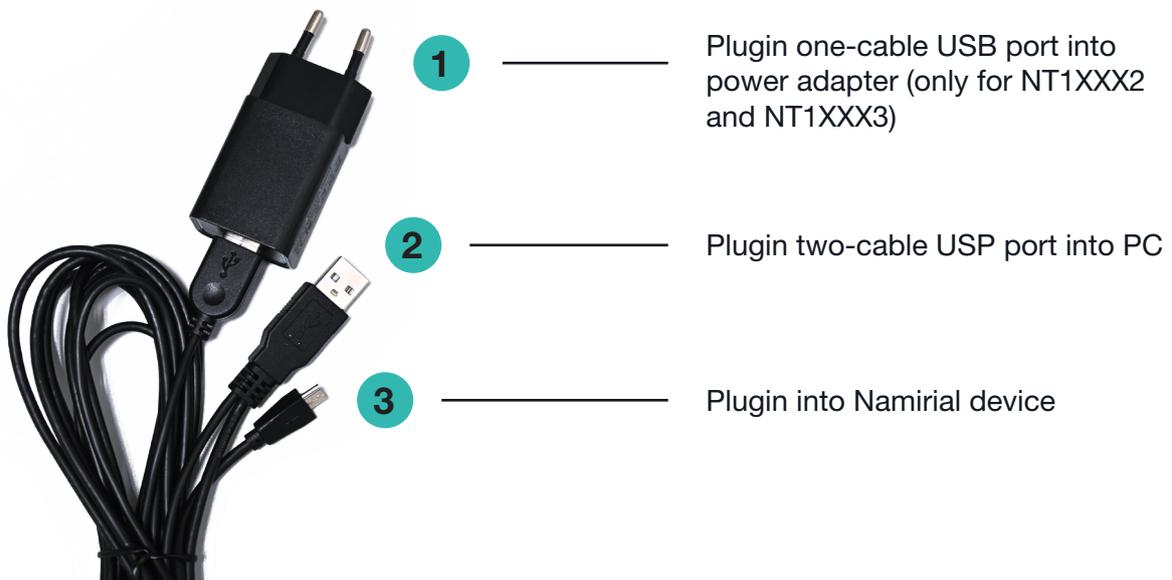



2. Driver

a) Uninstall Software and Drivers of other Vendors

If you previously used other signature monitors, uninstall related software and restart your computer.


b) Installation of DisplayLink Driver

If the signature tablet screen does not show any content after a few seconds you may need to install a DisplayLink.

Driver (usually not needed for Win 8.1+)

Download here:


www.synaptics.com/products/displaylink-graphics/downloads

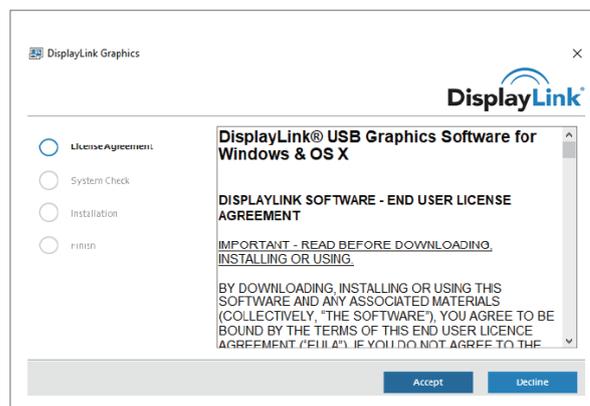

3. Namirial LCD Tablet Installation


Install the driver on your system: Namirial PAD Driver NT10XXX/NT11XXX

Download here: support.namirial.com/en/download/tsp/#namirial-pad

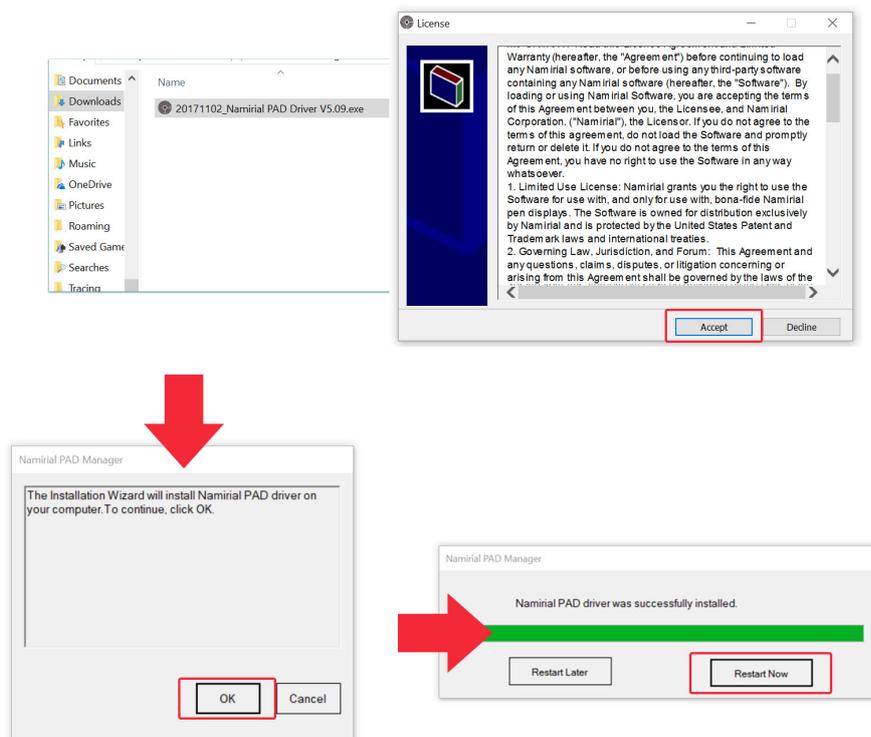



4. Set as extended display

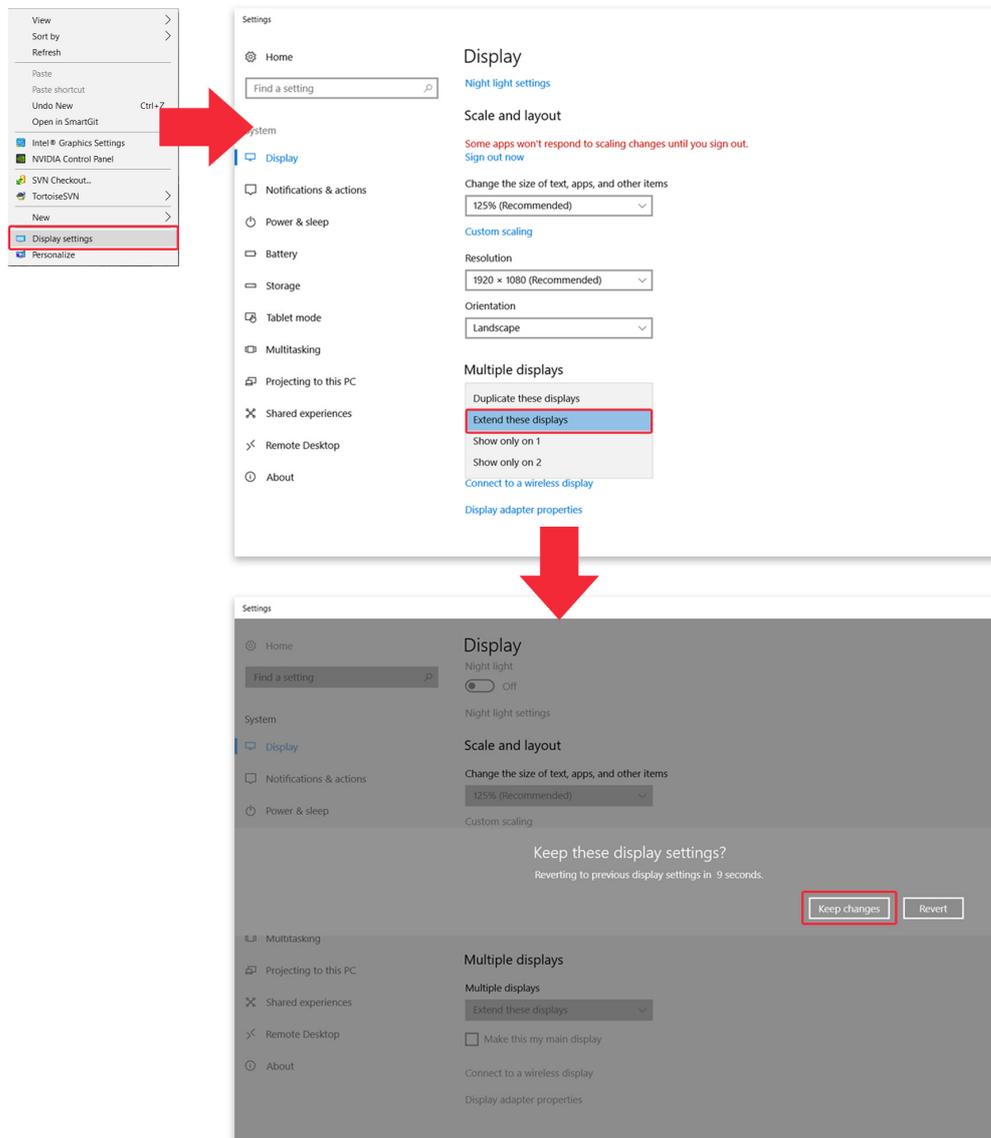

- Open the context menu with a right mouse click on your desktop and click “Display Settings”
- Change to “Extend these displays” under the section “Multiple displays”
- Click “Keep changes” to apply your changes


Important: Make sure your NT10XXX/NT11XXX pad and other displays are horizontally aligned at the top.






5. Handwriting Area Mapping

Select “Namirial PAD display” by clicking the arrows to enable the pen on the signature tablet

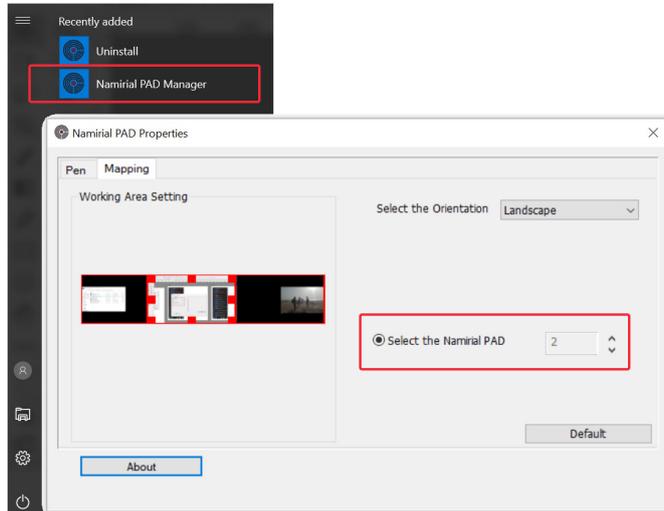


Important: If mapping is set correctly, but the response is still on the wrong display, then use the arrows of the dropdown to deselect and select your NT10XXX/NT11XXX device again.

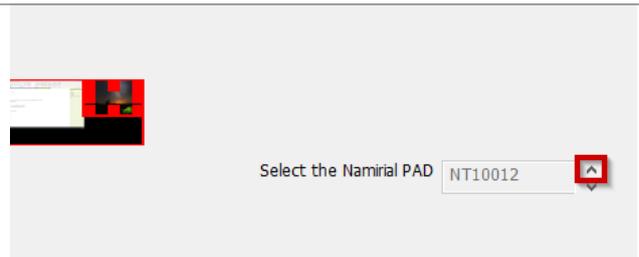

6. Pen Settings (optional)


Change the tip feel or measure of the current pressure of the pen. Best practice settings are set by default.

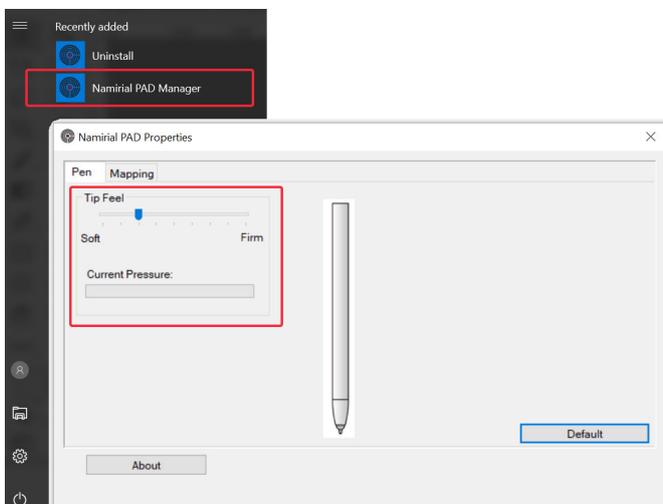



7. Change Pen Holder location based on Device Orientation for NT10XXX

a) Open all screws with a screwdriver

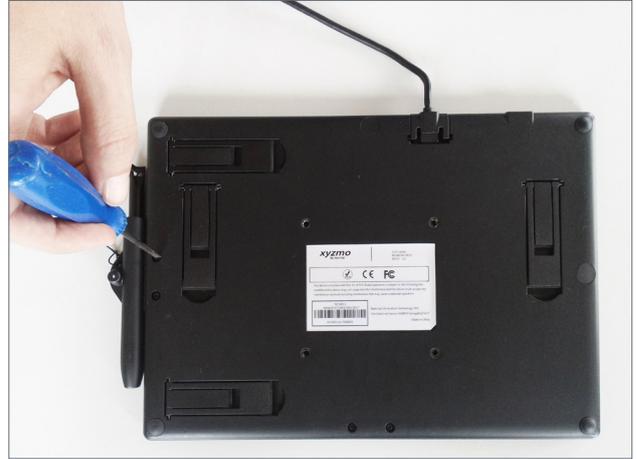

b) Pull out the pen holder and put the rubber cover into the empty hole which is included in the package



c) Mount the pen holder in your preferred orientation position and tighten all screws








d) Extend the two stands for your preferred orientation




8. Change Pen Holder location based on Device Orientation for NT11XXX

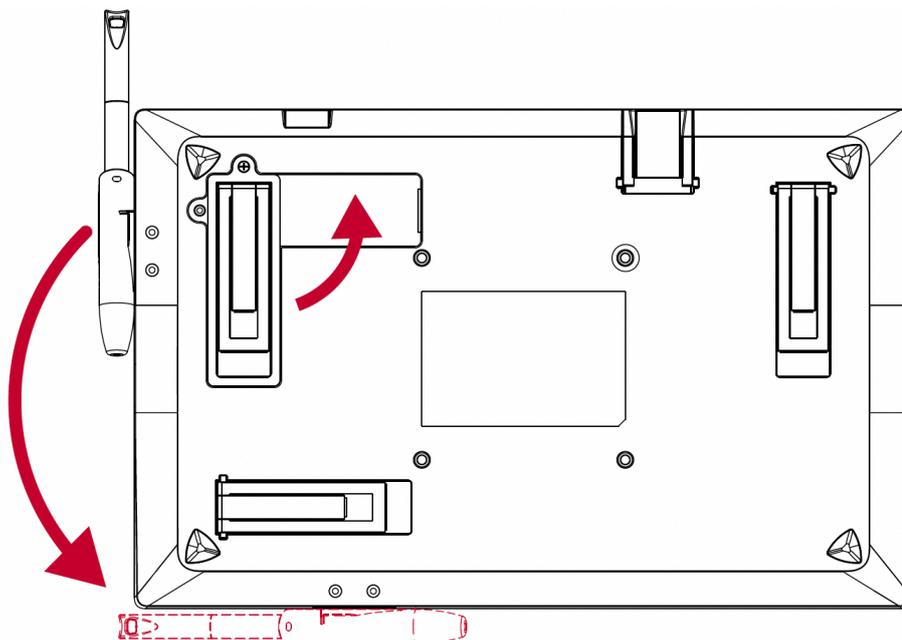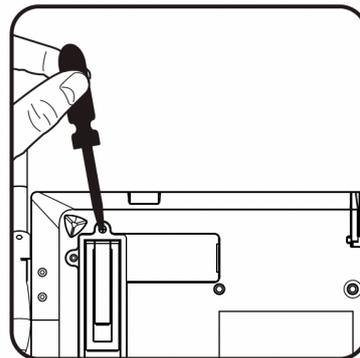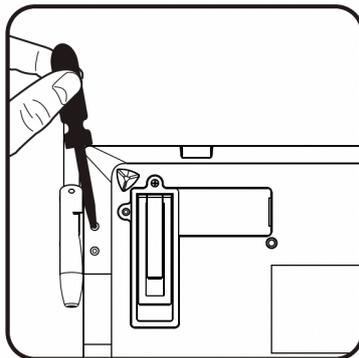



9. Orientation Mode Change

- a) Change the orientation mode of the screen itself with the Namirial Pad Manager by selecting “Landscape or Portrait”

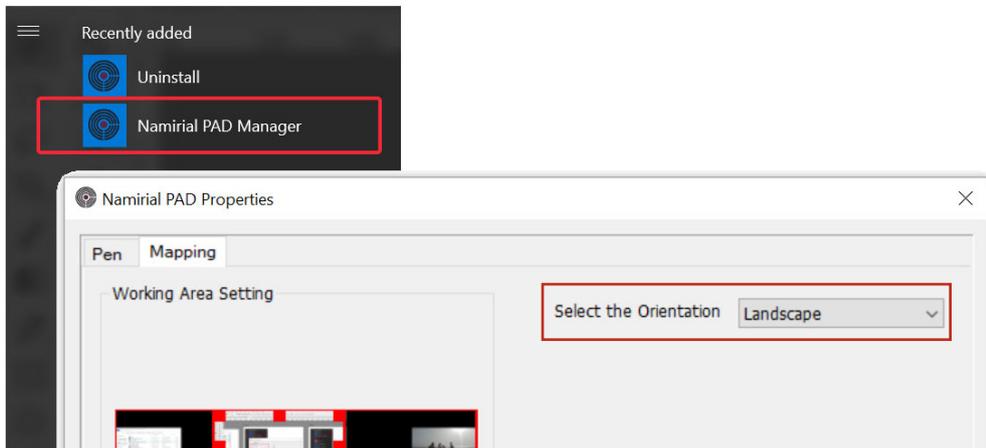

- b) Sample device orientations (portrait or landscape)






10. Replacing pen tip

If the pen tip became too short or has a sharp edge after some time, it is recommended to replace the tip to protect the surface of the device from scratches. This can be done by accordingly switching to the back-up tip.

a) Pull out the pen tip straight from the electromagnetic pen with the pincette tool

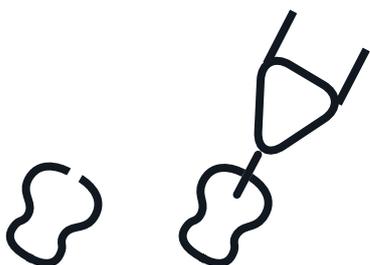

b) Insert the new tip into the pen and then push in the tip until it does not move



Information on WEEE Directive

In accordance with Directive 2012/19/EU on waste electrical and electronic equipment (WEEE), this product is marked with the crossed-out wheeled bin symbol. This indicates that the product should not be disposed of with household waste but must be taken to an authorized collection point for recycling and environmentally sound disposal.

All information has been compiled to the best of our knowledge and belief. We exclude any liability due to incomplete, incorrect or outdated information. This document will be continuously revised and adapted to changes in legislation or case law, technology. We are pleased to receive any requests for clarification, updating and supplementation at any time via e-mail to contacts@namirial.com.

This document does not constitute legal advice. In particular, it cannot replace individual legal advice that takes into account the specifics of each case.