



Quick Start Guide

NT10011 LCD Tablet



2

Installation DisplayLink Diver It depends on your Windows version if this driver is required



Namirial LCD Tablet Installation

Install Driver on your Windows: Namirial PAD Driver NT10011 Download here: https://support.namirial.com/en/download/tsp/#namirial-pad





a) Open the "Control Panel" in the Windows menu

b) Open the "Display Setting" and click "Change display settings"

c) Change to "Extend these dispays" and select "2.NT10011"

5 Handwriting Area Mapping

Select Namirial PAD display to enable the pen on the right display

0	Namirial PAD Manager	
Nan	nirial PAD Properties	
Pen	Mapping	
-W	orking Area Setting	Select the Orientation Landscape V
		Select the Namirial PAD 2
	About	Default



Pen Settings

Change tip feel or messure the current pressure of the pen Best practice settings are set by default

=	Recently added	
_	Uninstall	
	Namirial PAD Manager	
	Namirial PAD Properties	×
M	Pen Mapping	
	Tip Feel	
64	Soft Firm	
	Current Pressure:	
8		
P-1	-	
	V	Default
ŝ	About	
Ф		

